

キーボード別キー入力一覧

106型日本語キーボードレイアウト

110	112	113	114	115		116	117	118	119	120	121	122	123	75	76	124	125	126	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		90	95	100	105
16	17	18	19	20	21	22	23	24	25	26	27	28		43		91	96	101	106
30	31	32	33	34	35	36	37	38	39	40	41	42				92	97	102	
44		46	47	48	49	50	51	52	53	54	55	56	57			93	98	103	
58	134	135	60	131		61		132	133	62	136	137	64	83		99	104	108	
														79	84	89			

※英語版OSでの利用時は、一部のキー(赤色)にて入力されるキーコードが異なります。

キー番号	N8170-21 ラック用キーボード			
	半角	SHIFT+ 半角	全角	半角 +FUNC
1	半角/全角	半角/全角	半角/全角	
2	1	!	ぬ	
3	2	"	ふ	
4	3	#	あ	
5	4	\$	う	
6	5	%	え	
7	6	&	お	
8	7	'	や	
9	8	(	ゆ	
10	9	)	よ	
11	0		わ	
12	-	=	ほ	
13	^	~	へ	
14	¥		¥	
15	Back Space		Back Space	
16	Tab	Tab	Tab	
17	q	Q	た	
18	w	W	て	
19	e	E	い	
20	r	R	す	
21	t	T	か	
22	y	Y	ん	
23	u	U	な	
24	i	I	に	
25	o	O	ら	
26	p	P	せ	
27	@	`	@	
28	[	{	[	
30		CapsLock 英数	CapsLock 英数	
31	a	A	ち	
32	s	S	と	
33	d	D	し	
34	f	F	は	
35	g	G	き	
36	h	H	く	
37	j	J	ま	
38	k	K	の	
39	l	L	り	
40	:	+	れ	
41	;	*	け	
42	]	}	む	
43	Enter	Shift+ Enter	Enter	
44	L-Shift	L-Shift	L-Shift	
46	z	Z	つ	
47	x	X	さ	
48	c	C	そ	
49	v	V	ひ	
50	b	B	こ	
51	n	N	み	
52	m	M	も	
53	.	<	ね	
54	.	>	る	
55	/	?	め	
56	\		ろ	
57	R-Shift	R-Shift	R-Shift	
58	L-Ctrl	SHIFT+ L-Ctrl	L-Ctrl	

英語OS環境時		
半角	SHIFT+ 半角	FN+ 半角
~	~	
1	!	
2	@	
3	#	
4	\$	
5	%	
6	^	
7	&	
8	*	
9	(	
0	)	
-	-	
=	+	
注1	注1	
BackSpace		
Tab	Tab	
q	Q	
w	W	
e	E	
r	R	
t	T	
y	Y	
u	U	
i	I	
o	O	
p	P	
[	{	
]	}	
CapsLock	CapsLock	
a	A	
s	S	
d	D	
f	F	
g	G	
h	H	
j	J	
k	K	
l	L	
:	:	
;	;	
]	}	
\		
Enter	SHIFT+ Enter	
L-Shift	L-Shift	
z	Z	
x	X	
c	C	
v	V	
b	B	
n	N	
m	M	
.	<	
.	>	
/	?	
注1	注1	
R-Shift	R-Shift	
L-Ctrl	SHIFT+ L-Ctrl	

キー番号	N8170-21 ラック用キーボード			
	半角	SHIFT+ 半角	全角	半角 +FUNC
60	L-Alt	Shift+ L-Alt	L-Alt	
61	Space	Shift+ Space	Space	
62	R-Alt	Shift+ R-Alt	R-Alt	
64	R-Ctrl	Shift+ R-Ctrl	R-Ctrl	
75	Insert	Shift+ Insert	Insert	
76	Delete	Shift+ Delete	Delete	
79	←	Shift+ ←	←	Home
80	Home	Shift+ Home	Home	
81	End	Shift+ End	End	
83	↑	Shift+ ↑	↑	Pg Up
84	↓	Shift+ ↓	↓	Pg Dn
85	Pg Up	Shift+ Pg Up	Pg Up	
86	Pg Dn	Shift+ Pg Dn	Pg Dn	
89	→	Shift+ →	→	End
90	NumLock		NumLock	
91	Num 7		Num 7	
92	Num 4		Num 4	
93	Num 1		Num 1	
95	Num /	Num /	Num /	
96	Num 8	Num 8	Num 8	
97	Num 5	Num 5	Num 5	
98	Num 2	Num 2	Num 2	
99	Num 0	Num 0	Num 0	
100	Num *	Num *	Num *	
101	Num 9	Num 9	Num 9	
102	Num 6	Num 6	Num 6	
103	Num 3	Num 3	Num 3	
104	Num .	Num .	Num .	
105	Num -	Num -	Num -	
106	Num +	Num +	Num +	
108	Num Enter	Num Enter	Num Enter	
110	ESC	ESC	ESC	
112	F1	F1	F1	
113	F2	F2	F2	
114	F3	F3	F3	
115	F4	F4	F4	
116	F5	F5	F5	
117	F6	F6	F6	
118	F7	F7	F7	
119	F8	F8	F8	
120	F9	F9	F9	
121	F10	F10	F10	
122	F11	F11	F11	
123	F12	F12	F12	
124	PrintScreen	Shift+ PrintScreen	PrintScreen	
125	ScrollLock	Shift+ ScrollLock	ScrollLock	
126	Pause	Shift+ Pause	Pause	
131	無変換		無変換	
132	変換		変換	
133	カタカナ 英にのみ		カタカナ 英にのみ	
134	Fn		Fn	
135	L-Windows		L-Windows	
136	R-Windows		R-Windows	
137	Appli		Appli	

英語OS環境時		
半角	SHIFT+ 半角	FN+ 半角
L-Alt	Shift+ L-Alt	
Space	Shift+ Space	
R-Alt	Shift+ R-Alt	
R-Ctrl	Shift+ R-Ctrl	
Insert	Shift+ Insert	
Delete	Shift+ Delete	
←	Shift+ ←	
Home	Shift+ Home	
End	Shift+ End	
↑	Shift+ ↑	
↓	Shift+ ↓	
Pg Up	Shift+ Pg Up	
Pg Dn	Shift+ Pg Dn	
→	Shift+ →	
NumLock		
Num 7		
Num 4		
Num 1		
Num /	Num /	
Num 8	Num 8	
Num 5	Num 5	
Num 2	Num 2	
Num 0	Num 0	
Num *	Num *	
Num 9	Num 9	
Num 6	Num 6	
Num 3	Num 3	
Num .	Num .	
Num -	Num -	
Num +	Num +	
Num Enter	Num Enter	
ESC	ESC	
F1	F1	
F2	F2	
F3	F3	
F4	F4	
F5	F5	
F6	F6	
F7	F7	
F8	F8	
F9	F9	
F10	F10	
F11	F11	
F12	F12	
PrintScreen	Shift+ PrintScreen	
ScrollLock	Shift+ ScrollLock	
Pause	Shift+ Pause	
L-Windows		
R-Windows		
Appli		

注1: 英語キーボードに該当するキーが無い為に入力しても無効となります。