


This document describes how to install printer driver on Windows® 11 from “Add Printers and Scanners”.

1) You can download the latest driver from our official web site.

In this document, the driver will be downloaded to the c:\Temp folder.

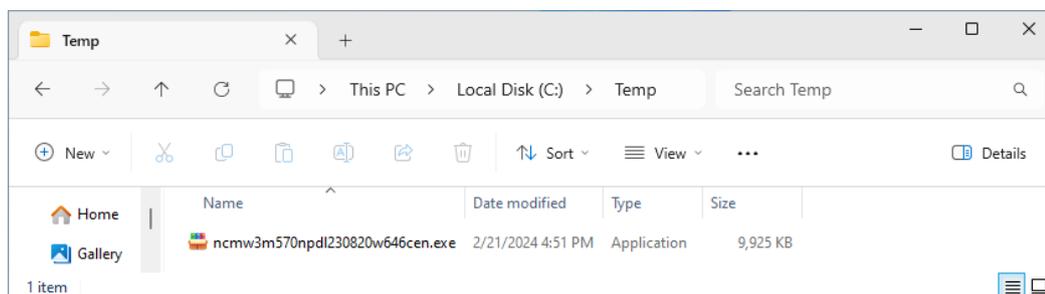


2) Double-click the downloaded file to decompress.

The file will be decompressed into the same location as the downloaded file.

3) Printer Driver Installation starts automatically.

If the installation screen does not automatically appear, proceed to step 5).


Click the "x" button at the top right of the screen to install from “Add Printers and Scanners”.

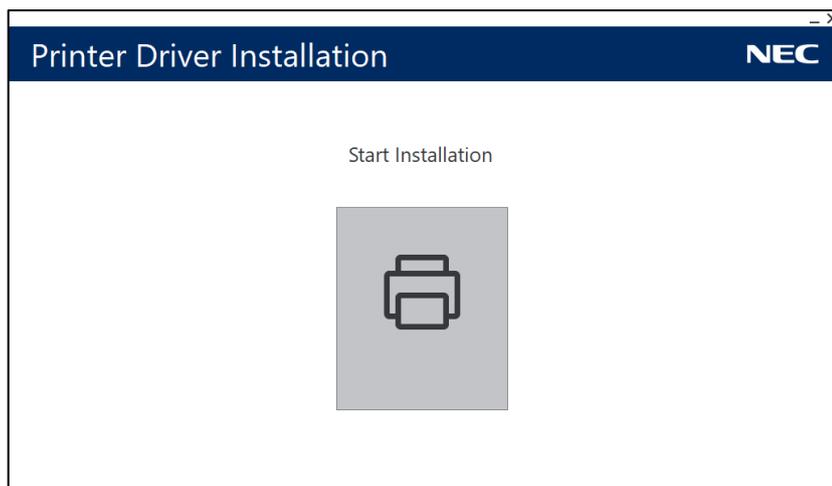


4) Click the "Exit" button to exit Printer Driver Installation.




5) Click the "Start" icon and open the "Start" menu, then select "Settings".

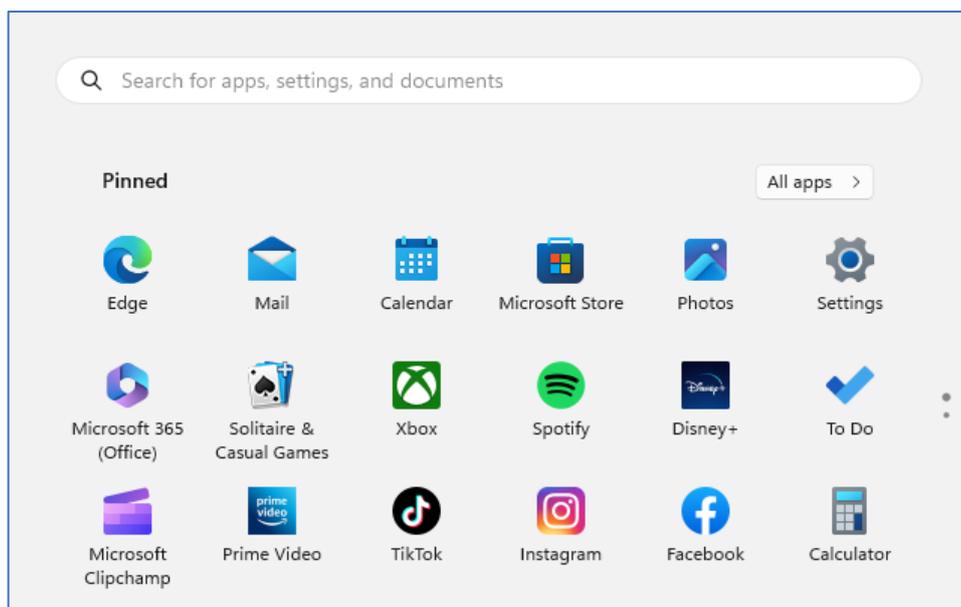

6) Select "Bluetooth & devices" from the left column of the "Settings" window.

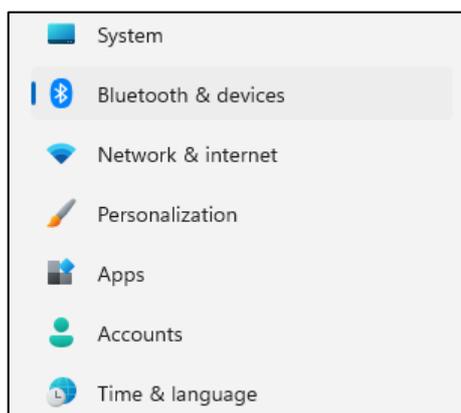

7) Select "Printers & scanners" in "Bluetooth & devices".

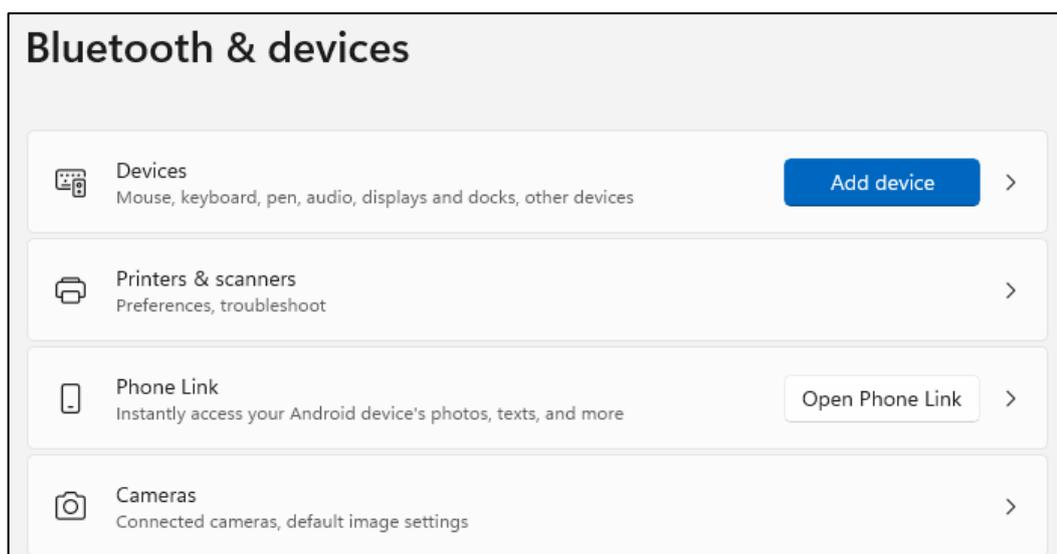


8) "Printers & scanners" is displayed.

Click the "Add device" button next to "Add a printer or scanner".




9) Search for available printers starts. Select "Add manually" next to "The printer that I want isn't listed".

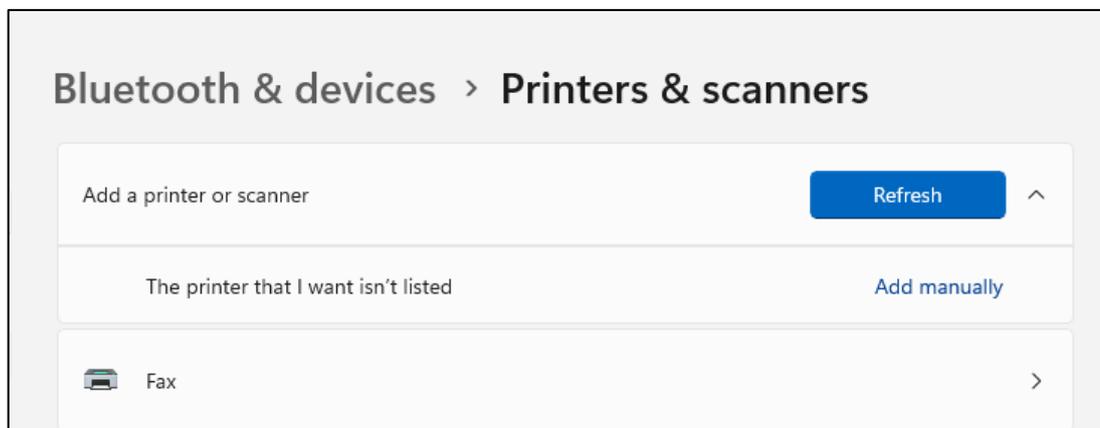


10) "Find a printer by other options" is displayed.


Select "Add a local printer or network printer with manual settings" and then click the "Next" button.

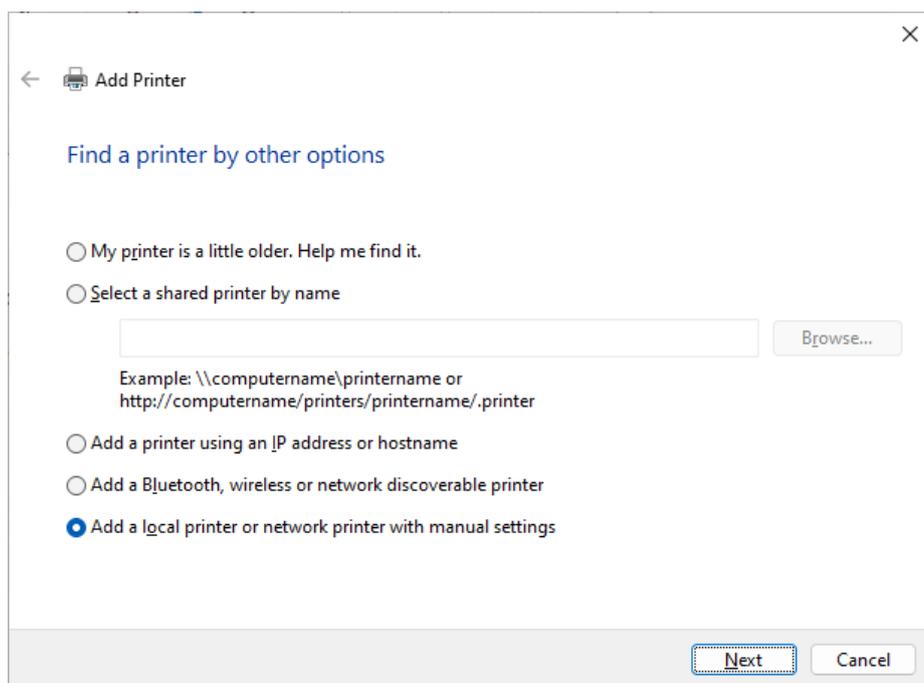


11) "Choose a printer port" is displayed. Select the port to use and click the "Next" button.

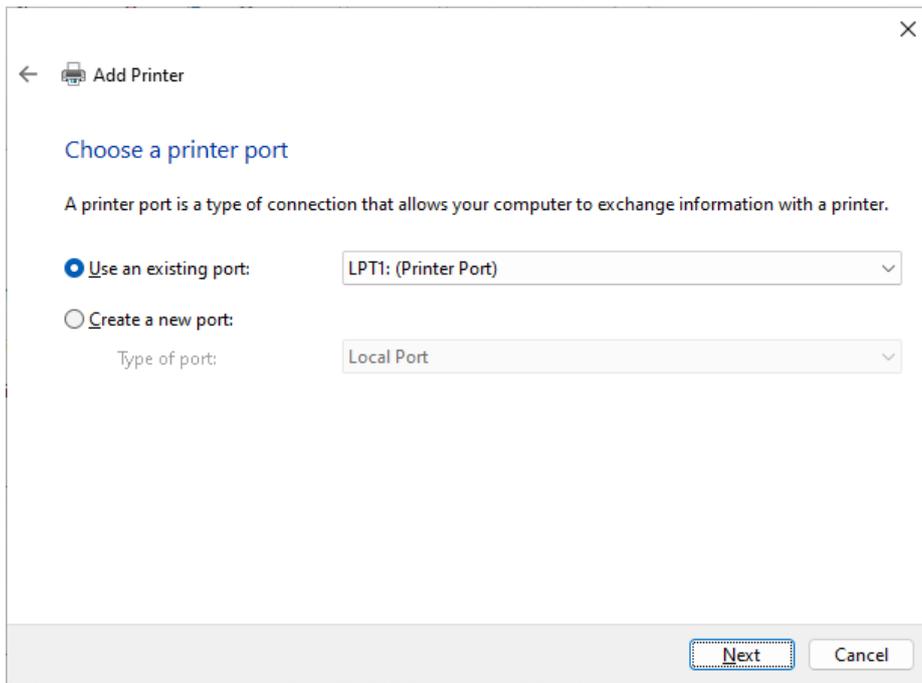

12) "Install the printer driver" is displayed. Click the "Have Disk" button.

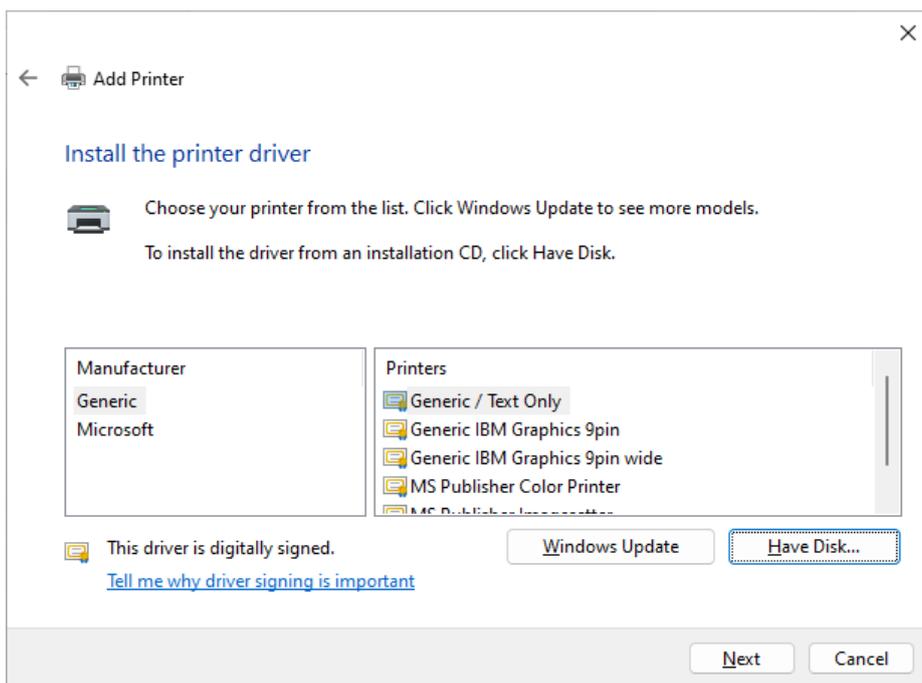


13) Specify the reference directory in the "Copy manufacturer's files from" box and click the "OK" button.

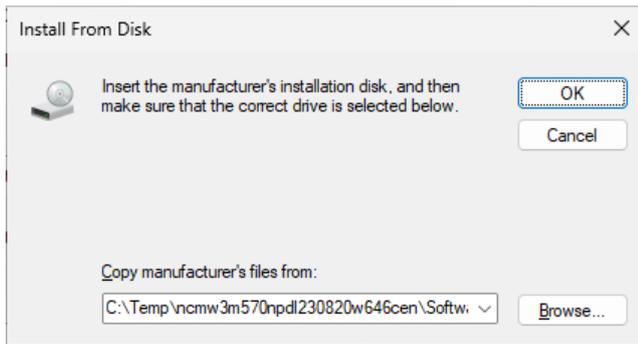


The way to search the reference directory is as follows.


Show the location where uncompressed files are saved (c:\Temp) and enter ".inf" in the text box at the upper right corner. Search will start and the location of inf file will be displayed on the "Search Results" window.

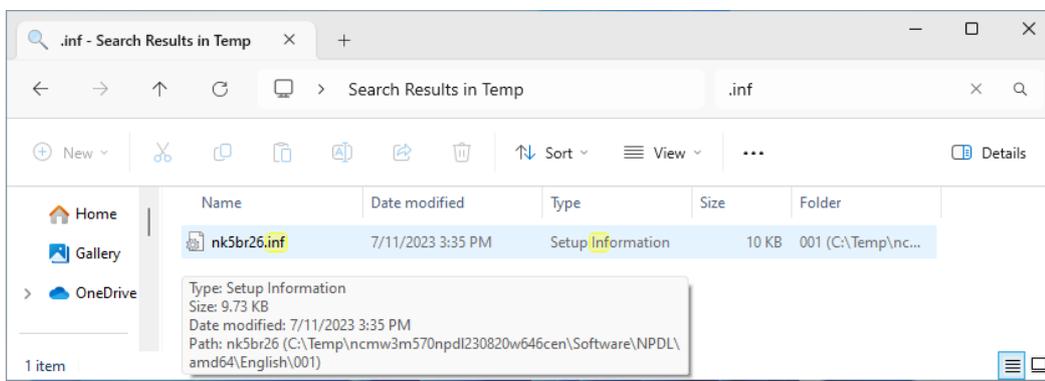


14) Select the correct print driver and click the "Next" button.

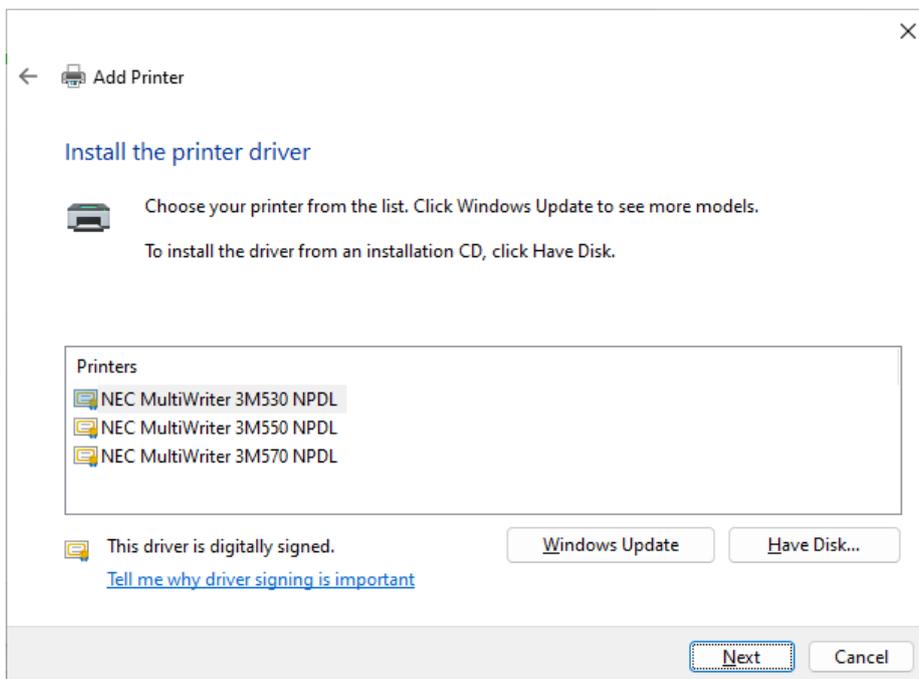


15) Change the printer name if necessary and click the "Next" button.

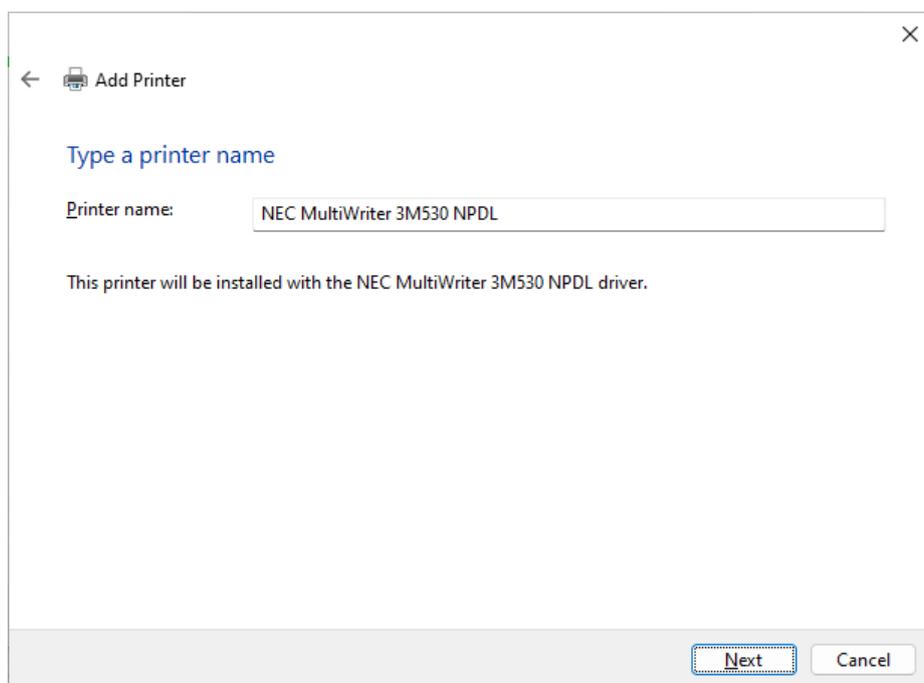


16) A message on Windows Security may be displayed. In that case, click the "Install" button.

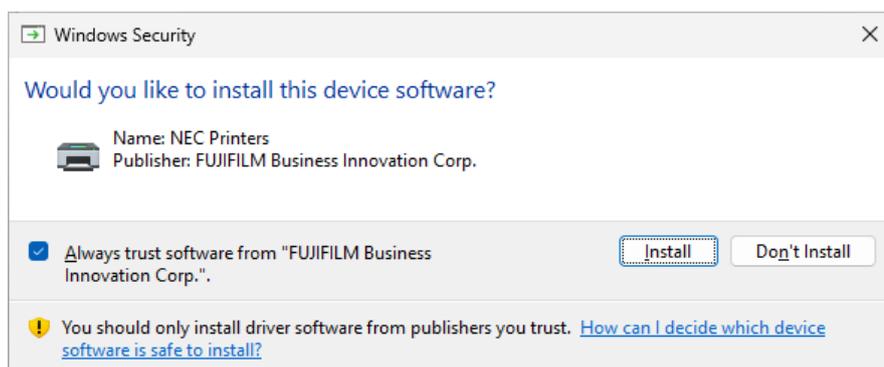


17) To share the printer, select "Share this printer so that others on your network can find and use it" and click the "Next" button.

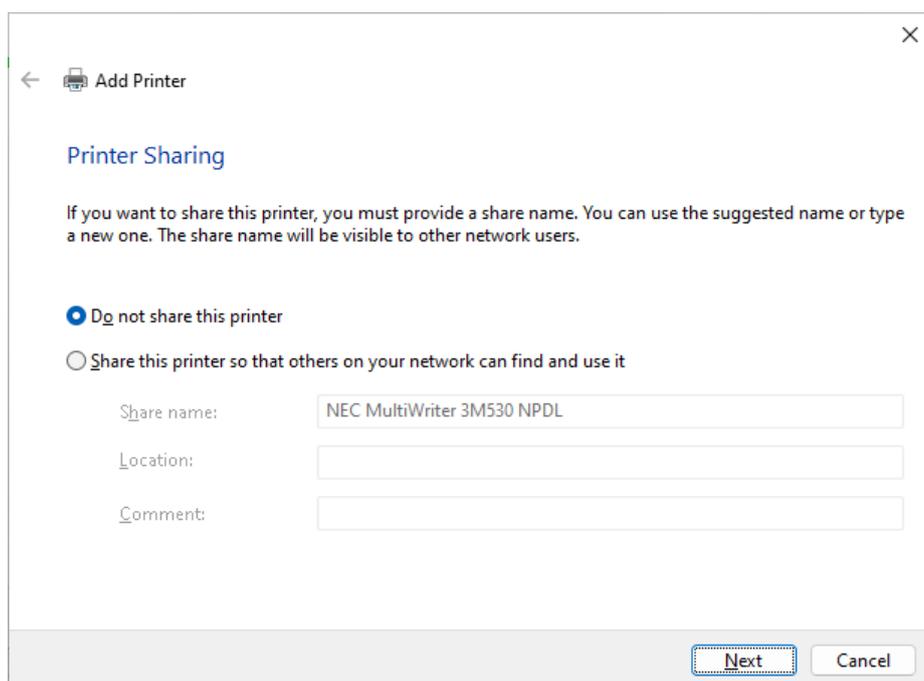

18) To print a test page, load paper to the printer, click "Print a test page" and then click "Finish".

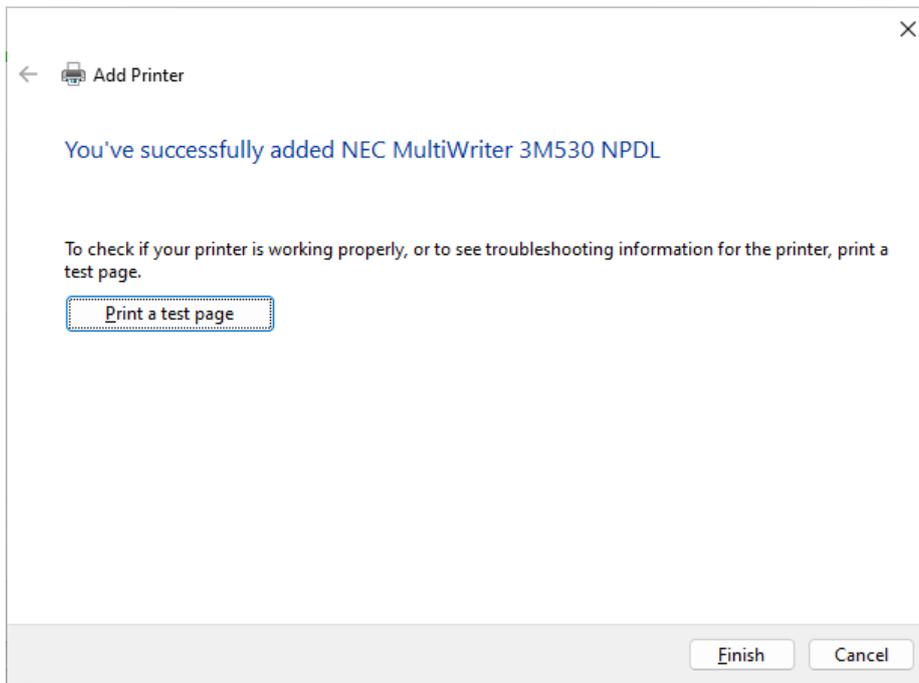

19) The added printer is listed in "Printers & scanners".

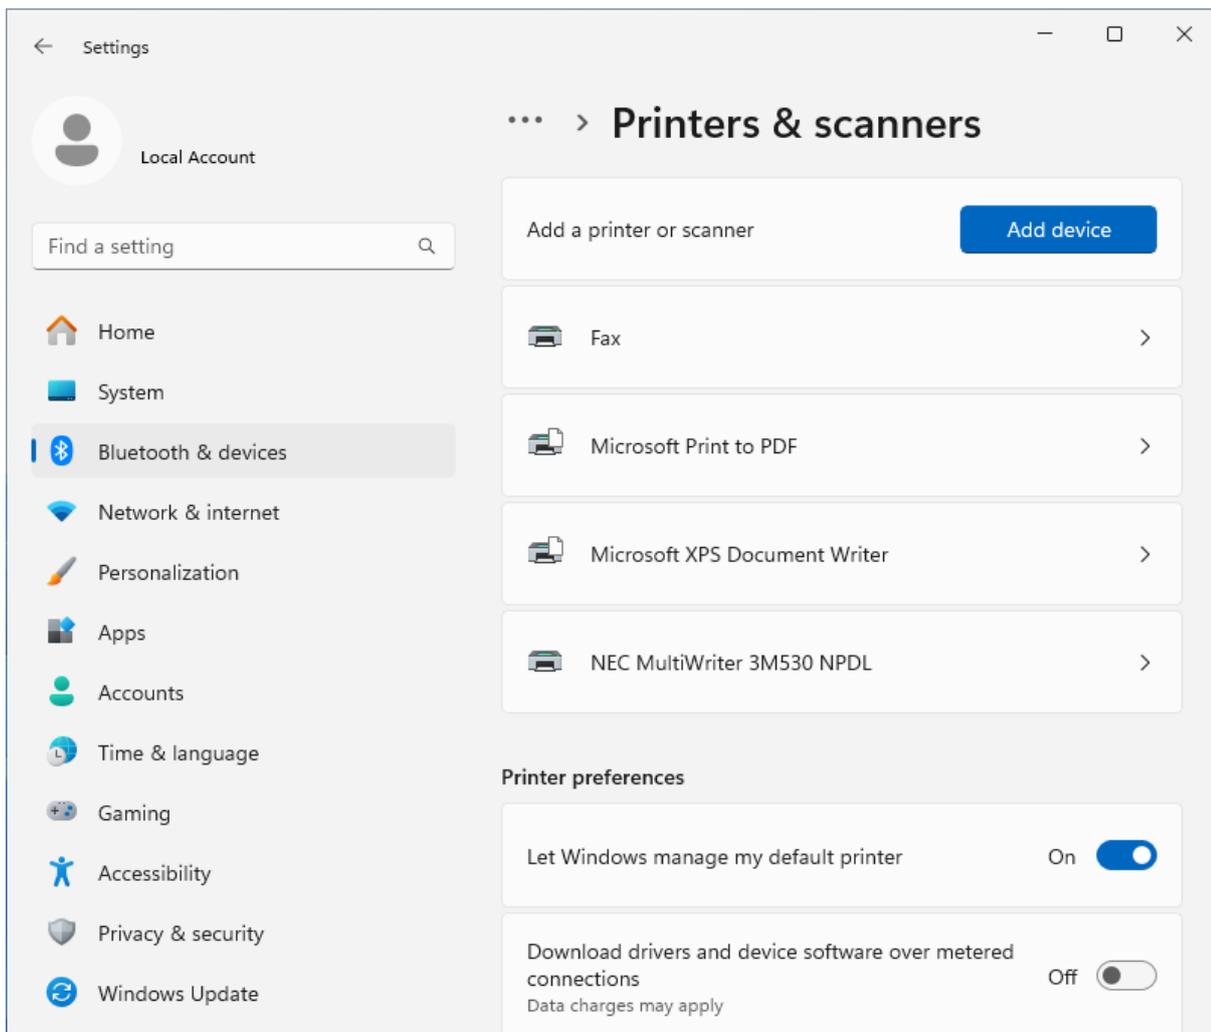

This is the end of the installation.